




# Disassembling Numark TT1600 Circuit board

This guide will show how to remove the circuit boards.

Written By: Sukhjinder

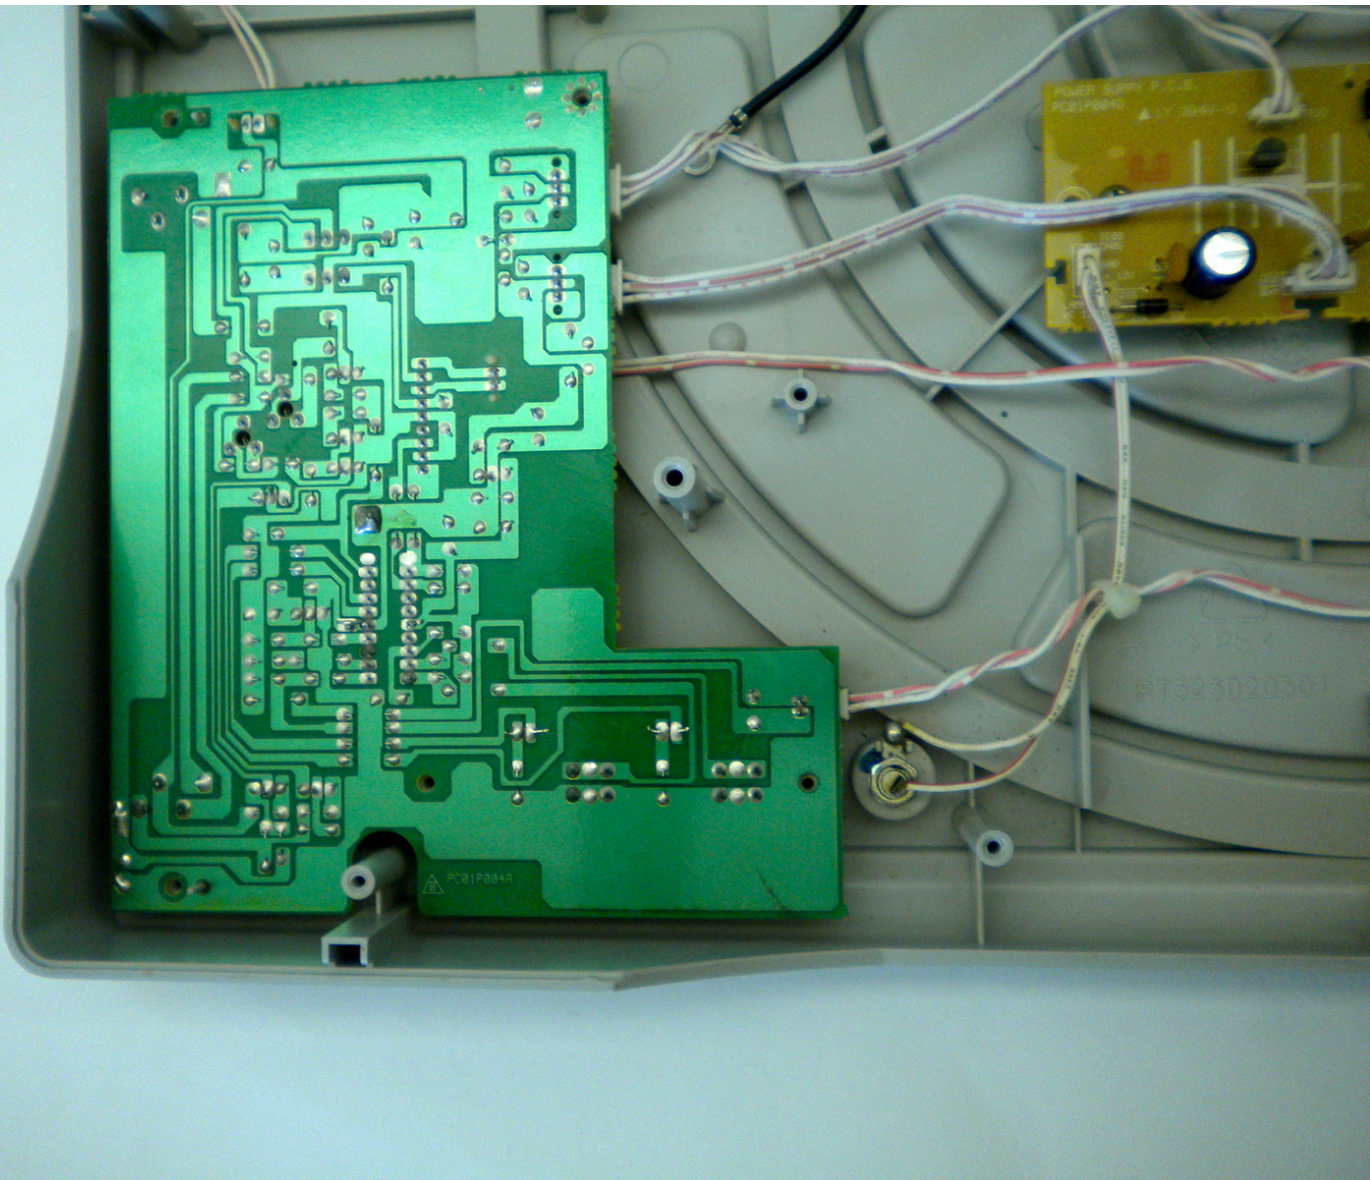



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-



## Step 1 — Circuit board




- Flip over the turntable and remove the nine screws on the outer edges.

## Step 2




- Remove the back cover by pulling it apart.

## Step 3

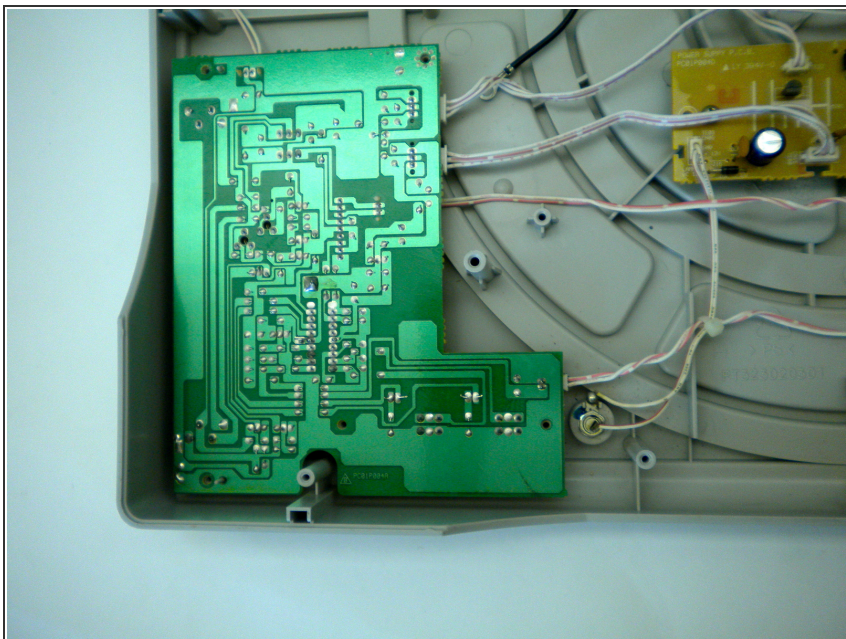

- Locate the largest circuit board inside the device.



## Step 4

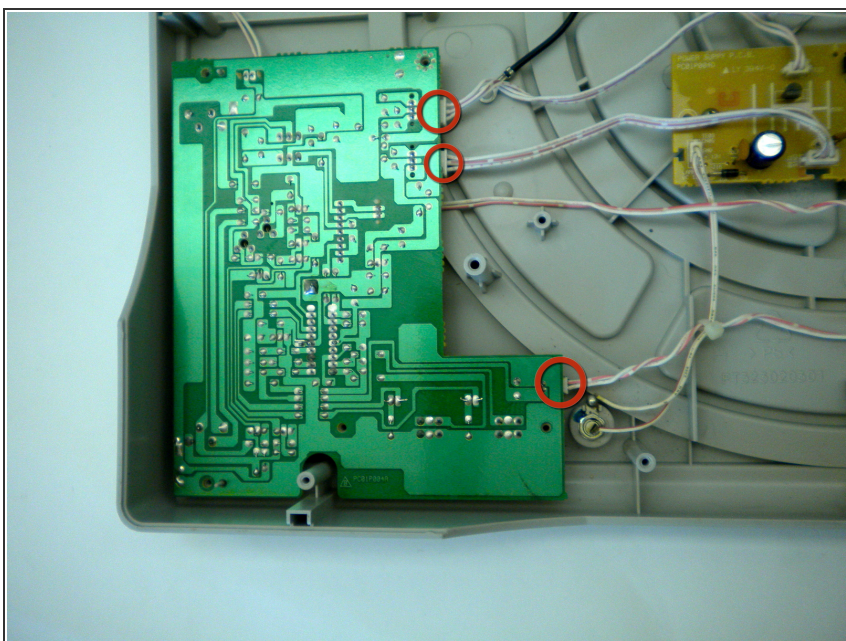

- Locate the wires that are plugged into the side of the circuit board.





## Step 5

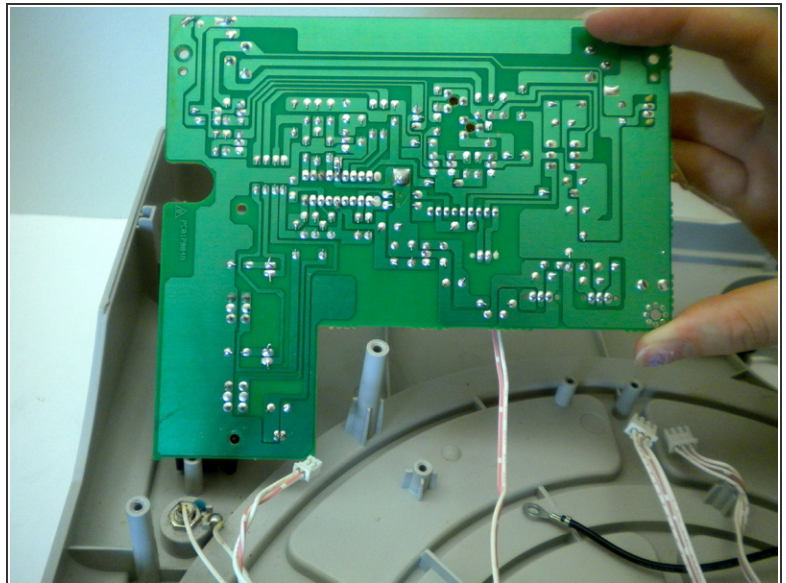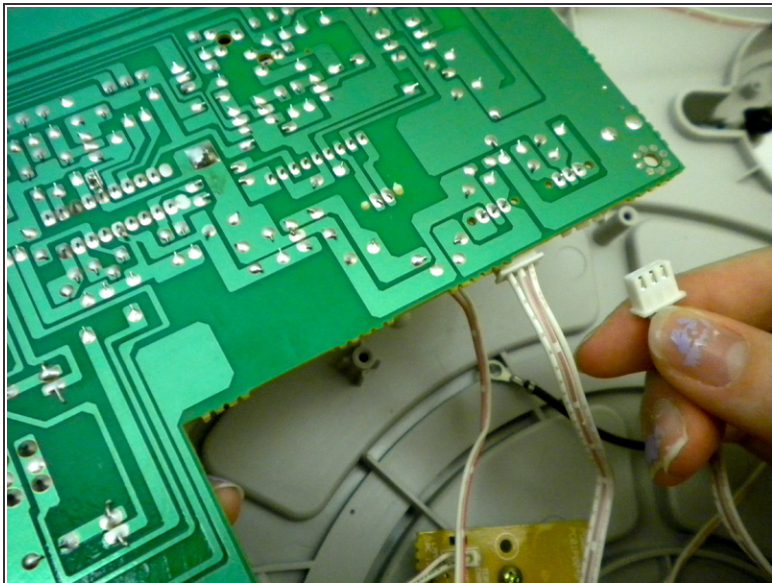

- Gently pull out the wires plugged into the circuit board.

## Step 6

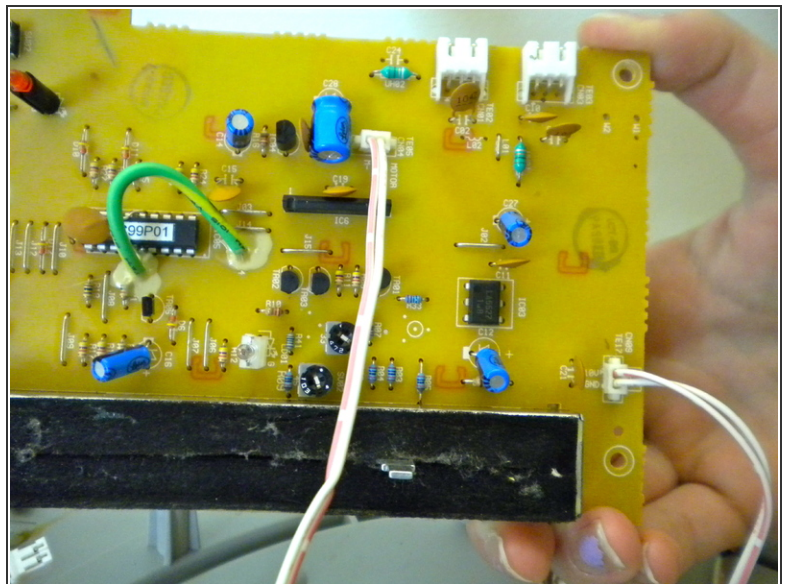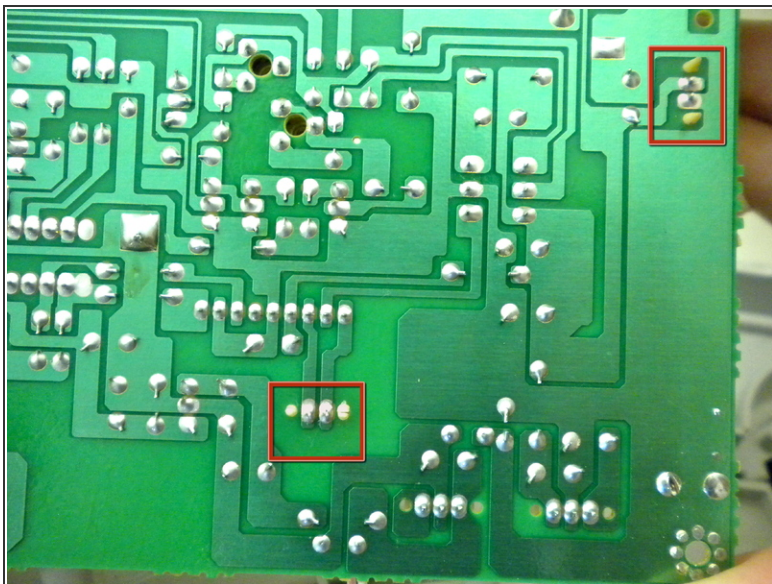

- Once the wires are unplugged you will notice two more wires plugged into the bottom of the circuit board.
- ⚠ Note that these wires are soldered onto the circuit, indicated by the red markers.
- To completely remove the circuit board these wires must be removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 03:15:40 PM.